


CTM 24174 KENWORTH K 100 - INTERIOR

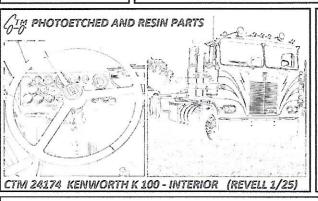

- DETACH WITH KNIFE

DRILL HOLE

BEND

GRIND

REPLACEMENT PART

OPTIONAL

- REPEAT

This set is not a children's toy and was designed for professional modellers only who already have some skills in working with photoetched parts. Special tools for bending of photoetched parts is recommended when working with this set. Non using this tool during bending may cause destruction of the part. Careful bending of the most of the parts could be also done using a metal ruler, a sharp knife and a tweezer on a hard surface. Pay attention, be careful and keep your safety and health in mind during work!

For gluing and filling a cyanoacrylate glue and a glue removing liquid is recommended. When (or even before) working with each part inspection of the real part on the vehicle or a picture of the real thing is recommended and helpful.

Modification of plastic parts may be required for proper use of some of the photoetched parts

CTM 24174 Kenworth K 100 - interior

1/ Dashboard upper panel

2/ Dashboard lower panel

3/ Dog house panel

4/ Locker handle

5/ Heating control panel

6/ Cluth pedal

7/ CB microphone

8/ AM radio

9/ CB radio

10/ Internal light

11/ AM/FM radio

12/ Heating control panel

13/ Gearstick head

14/ Speaker

15/ Trailer Air Suply

16/ Parking brake

17/ Control

18/ Ash tray

19/ Ash tray frame

20/ Brake pedal

21/ Throttle pedal

