
1:72 Scale

WW II US Navy LCM(3) Landing craft 美国海军LCM-3型登陆艇

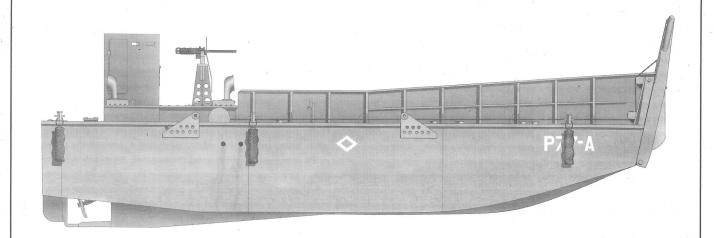

READ BEFORE ASSEMBLY

- Study and understand these instructions thoroughly before beginning assembly. Make sure all parts are included by comparing them to those shown on pages 2 of these instructions.
- Remove parts from sprues as needed, and trim excess with a hobby knife. Be careful not to lose small parts.
- Remove photo-etch parts from sprue as needed using a hobby knife or photo etch cutter.
- Apply cement to photo etch parts as shown on instructions. Applying too much cement will restrict the operation of these movable parts. Apply cement carefully! Removed photo etch parts can have sharp edges. Take care when handling these to avoid injury.
- Apply decals to necessary parts prior to assembly.
- Additional tools recommended(not included): Sprue cutter, Long nose pliers, hobby knife, file, tweezers, pin vise, scissors, cement, sandpaper, soft cloth, glue and paint.
- Keep all parts out of reach of children, as they pose a choking hazard. Discard all
 unnecessary bags and sprues when model is completed to avoid accidental injury.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件,不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量的快 干胶水使用可能导致可动零件会粘住、小心涂胶。
- 取蚀刻片时应特别注意安全, 防止利边划伤手指。
- 某些零件表面需贴上水贴纸,请选择在装配的同时进行。
- 推荐模型工具(自备): 胶水, 水口剪刀, 长咀钳, 刀片, 锉刀, 镊子钳, 钻, 剪刀, 瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆,模型内不含。
- 谨防小孩吸吮塑料零件,或者将塑料袋套在头上,制 作时应将套材远离小孩接触。



cyanoacrylate glue 使用强力胶



weight 配重



make hole 钻孔



cut / remove 切除



benc



file / sand 锉平



option 选择



no cemer 不涂胶水




deca 贴纸


水贴纸的使用:

- 1. 从水贴纸上剪下印花;
- 2. 将印花放入温水中浸10秒, 然后放在干净布上。
- 3. 拿着印花纸板将印花移到模型上;
- 4. 手指蘸水将印花移到适当的位置;
- 5.用软布轻压印花直至水干,汽泡消失。


DECAL APPLICATION

- 1. Cut off decal from sheet.
- 2. Dip the decal in tepid water 40^AC for about 10 sec. and place on a clean cloth.
- 3. Hold the backing sheet edge and slide decal onto the
- 4. Move decal into position by wetting decal with finger.
- Press decal gently down with a soft cloth until excess water and air bubbles are gone.

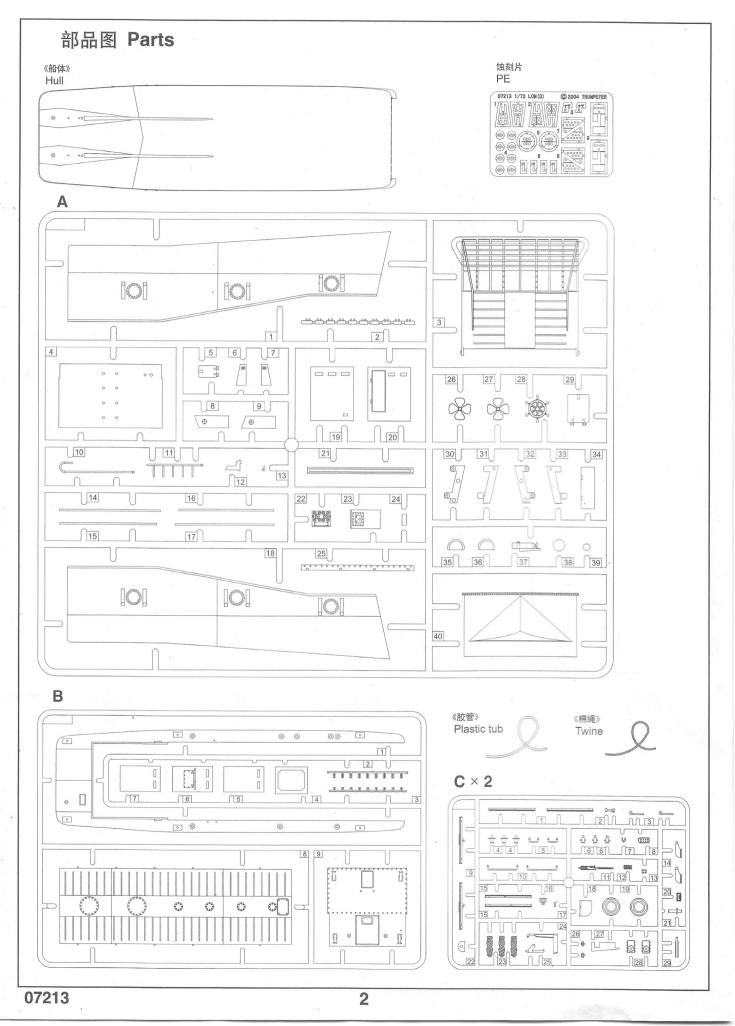


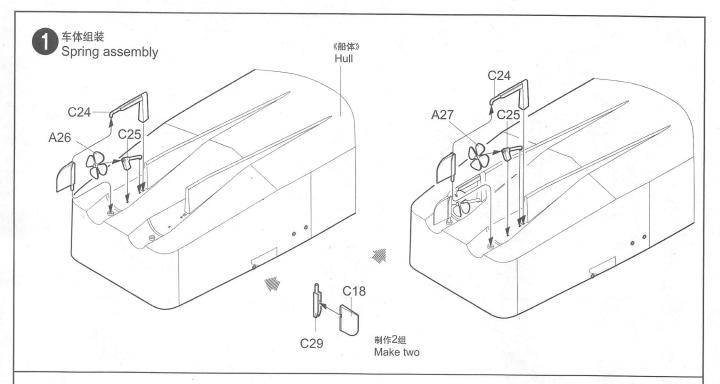

2 驾驶室组装 Cockpit assembly

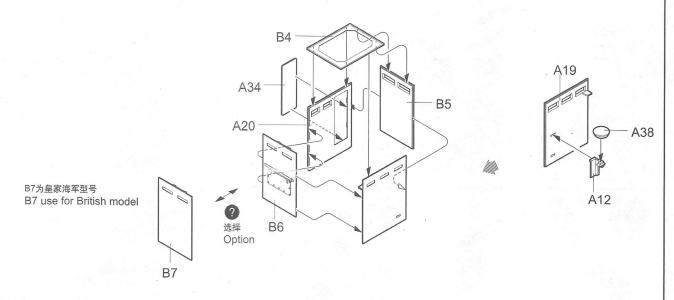


开定位孔(美国海军型号) Make holes (use for USN)




组装参阅第5页 Please refer to page 5 for assembly

开定位孔(皇家海军型号) Make holes (use for RN)

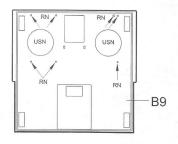



组装参阅第4页(皇家海军型号) Please refer to page 4 for assembly


开定位孔(皇家海军型号) Make holes (use for RN)

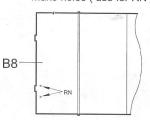


组装参阅第7页(皇家海军型号) Please refer to page 7 for assembly

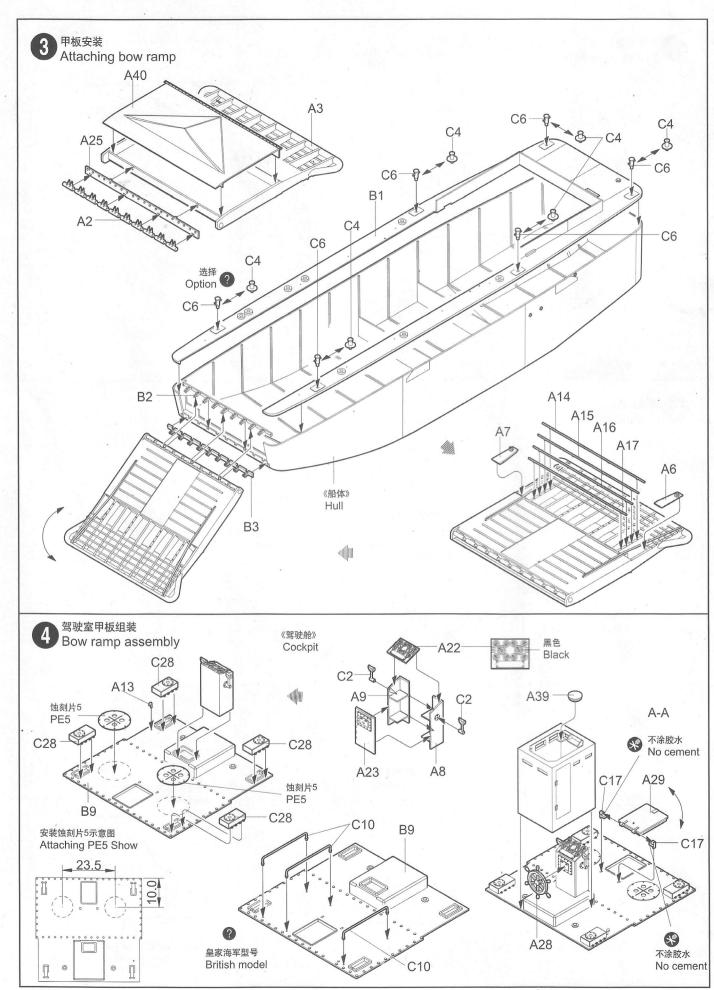

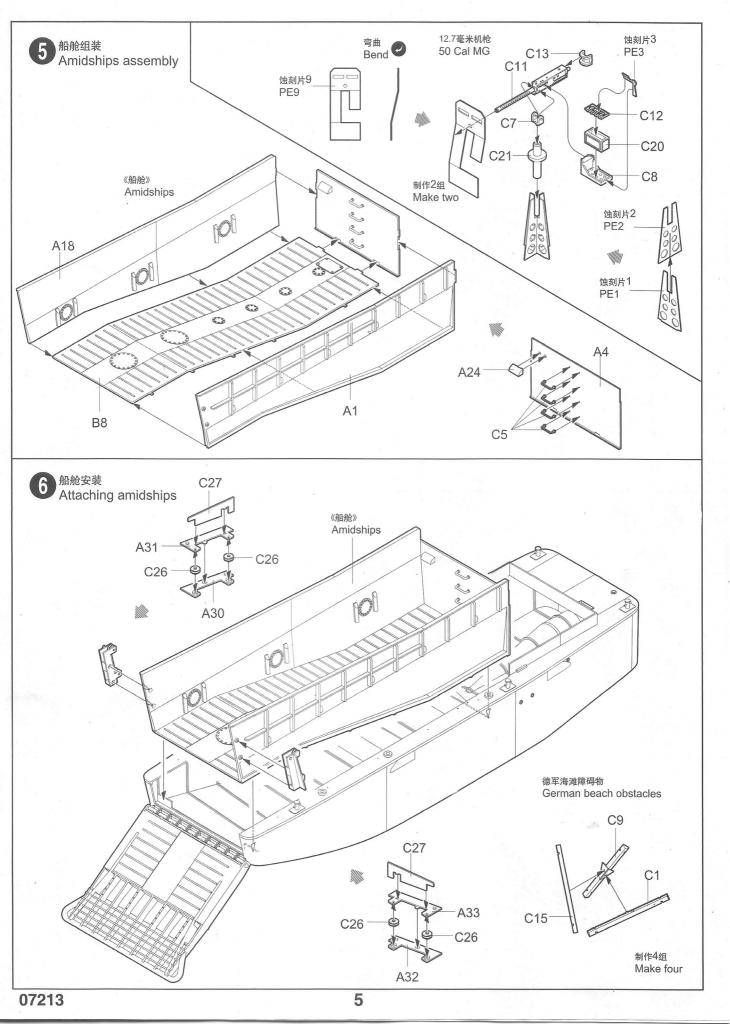

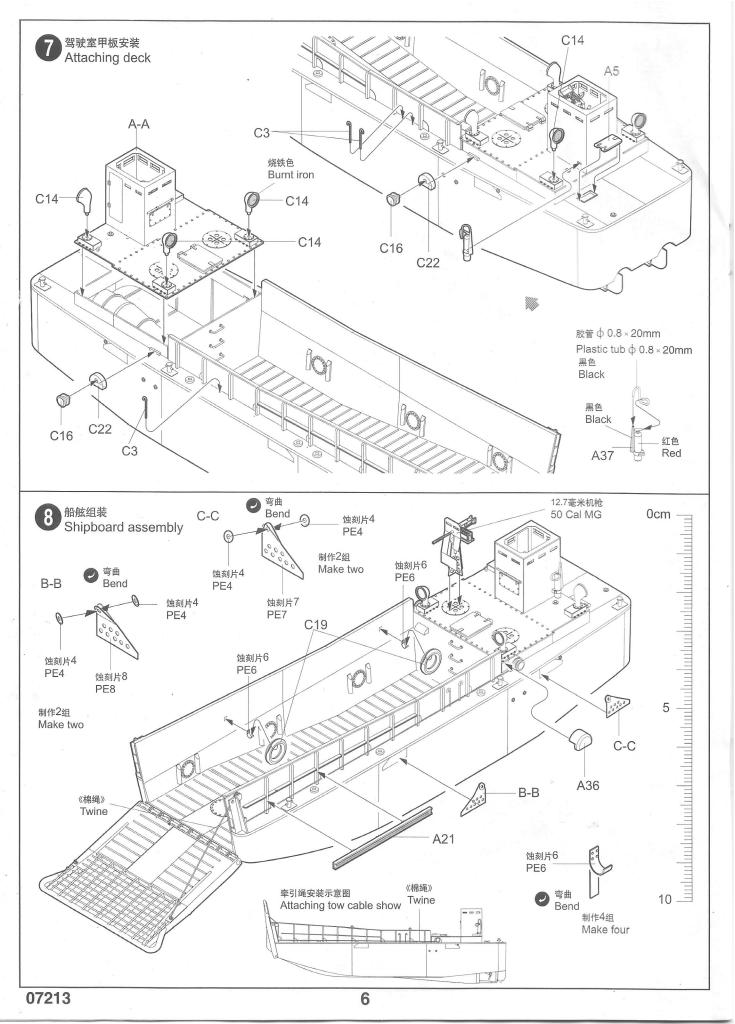

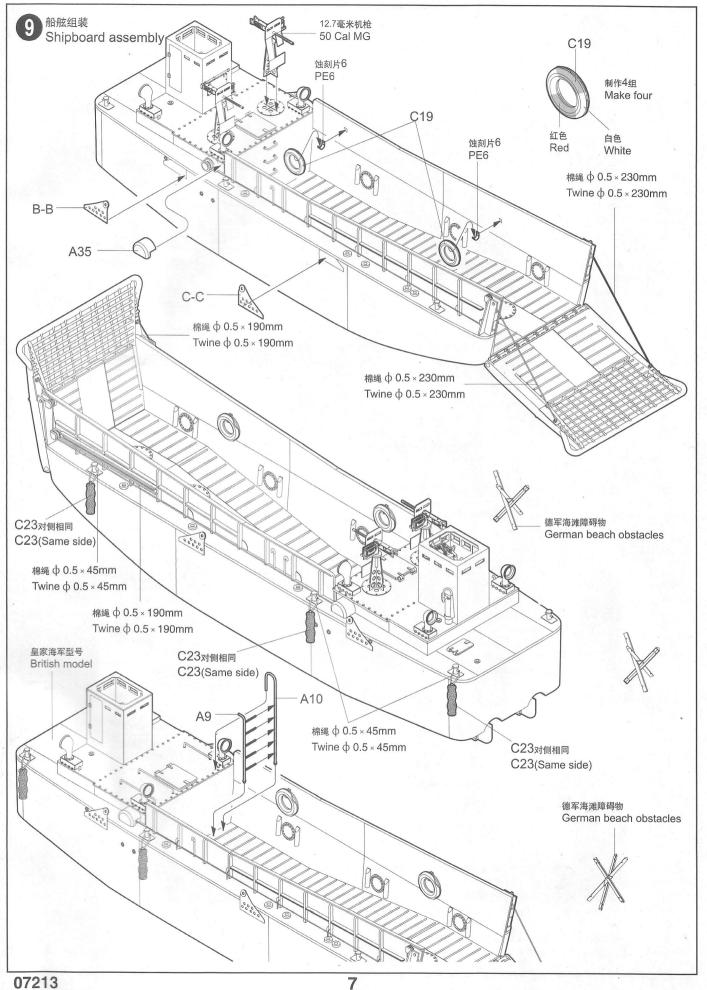

涂装同标贴指示 Painting & Marking guide 浅海灰 Light sea gray 黄褐色 Tan 铜色 Copper

07213